

To our customers,

Old Company Name in Catalogs and Other Documents

On April 1st, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: <http://www.renesas.com>

April 1st, 2010
Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (<http://www.renesas.com>)

Send any inquiries to <http://www.renesas.com/inquiry>.

Notice

1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
7. Renesas Electronics products are classified according to the following three quality grades: "Standard", "High Quality", and "Specific". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as "Specific" without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as "Specific" or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is "Standard" unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.
 - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.
 - "Specific": Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

M37900T2-RPD-E

User's Manual

Emulation Pod for 7900 Series MCUs

Keep safety first in your circuit designs!

- Renesas Technology Corporation and Renesas Solutions Corporation put the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage. Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of nonflammable material or (iii) prevention against any malfunction or mishap.

Notes regarding these materials

- These materials are intended as a reference to assist our customers in the selection of the Renesas Technology product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to Renesas Technology Corporation, Renesas Solutions Corporation or a third party.
- Renesas Technology Corporation and Renesas Solutions Corporation assume no responsibility for any damage, or infringement of any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application examples contained in these materials.
- All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by Renesas Technology Corporation and Renesas Solutions Corporation without notice due to product improvements or other reasons. It is therefore recommended that customers contact Renesas Technology Corporation, Renesas Solutions Corporation or an authorized Renesas Technology product distributor for the latest product information before purchasing a product listed herein. The information described here may contain technical inaccuracies or typographical errors. Renesas Technology Corporation and Renesas Solutions Corporation assume no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors. Please also pay attention to information published by Renesas Technology Corporation and Renesas Solutions Corporation by various means, including the Renesas home page (<http://www.renesas.com>).
- When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to evaluate all information as a total system before making a final decision on the applicability of the information and products. Renesas Technology Corporation and Renesas Solutions Corporation assume no responsibility for any damage, liability or other loss resulting from the information contained herein.
- Renesas Technology semiconductors are not designed or manufactured for use in a device or system that is used under circumstances in which human life is potentially at stake. Please contact Renesas Technology Corporation, Renesas Solutions Corporation or an authorized Renesas Technology product distributor when considering the use of a product contained herein for any specific purposes, such as apparatus or systems for transportation, vehicular, medical, aerospace, nuclear, or undersea repeater use.
- The prior written approval of Renesas Technology Corporation and Renesas Solutions Corporation is necessary to reprint or reproduce in whole or in part these materials.
- If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination. Any diversion or reexport contrary to the export control laws and regulations of Japan and/or the country of destination is prohibited.
- Please contact Renesas Technology Corporation or Renesas Solutions Corporation for further details on these materials or the products contained therein.

Precautions to be taken when using this product

- This product is a development supporting unit for use in your program development and evaluation stages. In mass-producing your program you have finished developing, be sure to make a judgment on your own risk that it can be put to practical use by performing integration test, evaluation, or some experiment else.
- In no event shall Renesas Solutions Corporation be liable for any consequence arising from the use of this product.
- Renesas Solutions Corporation strives to cope with the issues given below at some charge or without charge.
 - (1) Repairing or replacing a flawed product. There can be instances in which a product cannot be repaired if more than one year have passed since the discontinuance of its marketing.
 - (2) Renovating or providing a workaround for product malfunction. This does not necessarily mean that Renesas Solutions Corporation guarantees the renovation or the provision under any circumstances.
- This product has been developed by assuming its use for program development and evaluation in laboratories. Therefore, it does not fall under the application of Electrical Appliance and Material Safety Law and protection against electromagnetic interference when used in Japan.
- Do not attempt to modify this equipment. If modified, your authority to operate this equipment might be voided by FCC.
Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.
Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

For inquiries about the contents of this document or product, fill in the text file the installer of the emulator debugger generates in the following directory and email to your local distributor.

\\SUPPORT\Product-name\\SUPPORT.TXT

Renesas Tools Homepage <http://www.renesas.com/en/tools>

Preface

The M37900T2-RPD-E is an emulation pod for the 7900 Series of 16-bit microcomputers. It's used with a PC4701 emulator.

The M37900T2-RPD-E is used with a pod probe (separately available) matching to the MCU group of the target system.

This user's manual mainly describes specifications of the M37900T2-RPD-E and how to setup it. For details on the following products, which are used with the M37900T2-RPD-E, refer to each product's user's manual.

- Pod probe : Each pod probe's User's Manual
- Emulator : PC4701 User's Manual
- Emulator debugger : M3T-PD79 User's Manual

All the components of this product are shown in "2.2 Package Components" (page 15) of this user's manual. If there is any question or doubt about this product, contact your local distributor.

To use the product properly

Precautions for Safety



- In both this user's manual and on the product itself, several icons are used to insure proper handling of this product and also to prevent injuries to you or other persons, or damage to your properties.
- The icons' graphic images and meanings are given in "Chapter 1. Precautions for Safety". Be sure to read this chapter before using the product.

When using outside Japan



- When using in Europe, the United States, or Canada, be sure to use both the emulator and the emulation pod which meet overseas standards. EMI standards are not met when the M37900T2-RPD-E is used with the PC4700H or PC4700L emulator.

Contents

Chapter 1. Precautions for Safety	7
1.1 Safety Symbols and Meanings	8
Chapter 2. Preparation	13
2.1 Terminology	14
2.2 Package Components	15
2.3 Other Tool Products Required for Development	15
2.4 Name of Each Part	16
(1) System Configuration.....	16
(2) Inside of the Emulation Pod	17
2.5 When Using the Emulator for the First Time	18
Chapter 3. Setting Up	19
3.1 Selecting Clock Supply	20
(1) Using the Oscillator Circuit on the Target System	21
(2) Changing the Internal Oscillator Circuit of the Emulation Pod	22
(3) Replacing the Oscillator Circuit Boards	23
3.2 Connecting the Pod Probe and Emulation Pod	24
3.3 Connecting the PC4701 and Emulation Pod	26
(1) Connecting the Cable to the PC4701	26
(2) Connecting the Cable to the Emulation Pod	27
Chapter 4. Usage	29
4.1 Turning on Power	30
(1) Checking the Connection of the System	30
(2) Turning on Power	30
(3) LED Display When PC4701 Starts Up Normally	31
4.2 Downloading Firmware	32
(1) When It is Necessary to Download Firmware	32
(2) Downloading Firmware in Maintenance Mode	32
4.3 Starting up the Emulator Debugger (Setting EMEM Dialog)	33
(1) Processor Mode	33
(2) Emem Address	33
(3) ROM Address.....	33
(4) DMA Address	33
(5) 8-bit bus mode Address	33
(6) Map Address	33
4.4 Self-check	34
(1) Self-check Procedure	34
(2) If an Error is Detected in the Self-check	35

Chapter 5. Specifications	37
5.1 Specifications	38
5.2 External Dimensions of the Emulation Pod	39
Chapter 6. Troubleshooting	41
6.1 Flowchart to Remedy the Troubles	42
6.2 When the Emulator Debugger Does Not Start Up Properly	43
(1) When the LED Display of the PC4701 is Abnormal	43
(2) Errors Occur at Debugger Startup (target connected)	44
(3) Errors Occur at Debugger Startup (target not connected)	45
6.3 Operation Differs from that of MCUs with Flash Memory	46
(1) Initializing the Internal Resources of an MCU at Power-on	46
(2) Oscillator Circuits	46
Chapter 7. Maintenance and Guarantee	47
7.1 Maintenance	48
7.2 Guarantee	48
7.3 Repair Provisions	48
7.4 How to Request for Repair	49

MEMO

Chapter 1. Precautions for Safety

This chapter describes precautions for using this product safely and properly. For precautions for the pod probe, the emulator main unit and the emulator debugger, refer to each user's manual included with your product.

1.1 Safety Symbols and Meanings	8
WARNING Warning for Installation	9
Warnings for Use Environment	9
CAUTION Caution to Be Taken for Modifying This Product	9
Cautions to Be Taken for This Product	9
Cautions to Be Taken for Turning On the Power	9
IMPORTANT Note on Malfunctions in the PC4701 System	10
Notes on Downloading Firmware	10
Notes on the Self-check	10
Note on Quitting the Emulator Debugger	10
Note on Final Evaluation	10
Notes on Power Supply to the Target System	10
Notes on EMEM Dialog	11

Chapter 1. Precautions for Safety

In both the user's manual and on the product itself, several icons are used to insure proper handling of this product and also to prevent injuries to you or other persons, or damage to your properties.

This chapter describes the precautions which should be taken in order to use this product safely and properly. Be sure to read this chapter before using this product.

1.1 Safety Symbols and Meanings



WARNING

If the requirements shown in the "WARNING" sentences are ignored, the equipment may cause serious personal injury or death.



CAUTION

If the requirements shown in the "CAUTION" sentences are ignored, the equipment may malfunction.

IMPORTANT

It means important information on using this product.

In addition to the three above, the following are also used as appropriate.

△ means WARNING or CAUTION.

Example: ⚡ CAUTION AGAINST AN ELECTRIC SHOCK

⊘ means PROHIBITION.

Example: ⚠ DISASSEMBLY PROHIBITED

● means A FORCIBLE ACTION.

Example: 🖱 UNPLUG THE POWER CABLE FROM THE RECEPTACLE.

The following pages describe the symbols "WARNING", "CAUTION", and "IMPORTANT".

WARNING

Warning for Installation:



- Do not set this product in water or areas of high humidity. Spilling water or some other liquid into the main unit can cause an unreparable damage.

Warnings for Use Environment:



- The emulation pod is air-cooled with the ventilation slot. Therefore, do not block the ventilation slot. When heated to high temperatures, the emulation pod may not work properly.
- This equipment is to be used in an environment with a maximum ambient temperature of 35°C. Care should be taken that this temperature is not exceeded.

CAUTION

Caution to Be Taken for Modifying This Product:



- Do not disassemble or modify this product. Disassembling or modifying this product can cause damage. Disassembling and modifying the product will void your warranty.

Cautions to Be Taken for This Product:



- Use caution when handling the main unit. Be careful not to apply a mechanical shock.
- Do not touch the connector pins of the emulator main unit and the target MCU connector pins directly. Static electricity may damage the internal circuits.
- Do not pull the emulation pod main unit by the flexible cable (FLX120-RPD) for connecting to the emulator main unit or the flexible cable (FLX100) for connecting the target system. The cable may cause a break.
- Flexible cable (FLX120-RPD) for connecting to the emulator main unit and the flexible cable (FLX100) for connecting the target system are different from earlier models. The slits make them more flexible. However, excessive flexing or force may break conductors.
- Do not use inch-size screws for this equipment. The screws used in this equipment are all ISO (meter-size) type screws.

Cautions to Be Taken for Turning On the Power:



- Turn on the power of the emulator and target system as simultaneously as possible.
- Turn off the power of the emulator and target system as simultaneously as possible.
- Do not leave either the emulator or target system powered on, because of leakage current the internal circuits may be damaged.
- When turning on the power again after shutting off the power, wait about 10 seconds.

IMPORTANT

Note on Malfunctions in the PC4701 System:

- If the emulator malfunctions because of interference like external noise, do the following to remedy the trouble.
 - (1) Press the RESET switch on the emulator front panel.
 - (2) If normal operation is not restored after step (1), shut OFF power to the emulator once and then reactivate it.

Notes on Downloading Firmware:

- Before using this product for the first time, it is necessary to download the dedicated firmware. Please note that, to do this, it is necessary to start up the emulator main unit in maintenance mode. For firmware download procedures, see "4.2 Downloading Firmware" (page 32). Once the firmware has been downloaded, the product can be used by simply turning on the power.
- Do not shut off the power while downloading the firmware. If this happens, the product will not start up properly. If power is shut off unexpectedly, redownload the firmware in maintenance mode.
- Be sure to disconnect the target system before downloading the firmware.

Notes on the Self-check:

- If the self-check does not result normally (except target status errors), the product may be damaged. Then, contact your local distributor.
- Be sure to disconnect the target system before executing the self-check. For details on the self-check, see "4.4 Self-check" on page 34.

Note on Quitting the Emulator Debugger:

- To restart the emulator debugger after it ends, always shut power to the emulator module off once and then on again.

Note on Final Evaluation:

- Be sure to evaluate your system with an evaluation MCU. Before starting mask production, evaluate your system and make final confirmation with a CS (Commercial Sample) version MCU.

Notes on Power Supply to the Target System:

- The Vcc pin of the emulator is connected to the target system to observe the voltage of the target system. Therefore the emulator cannot supply the power to the target system. Design your system so that the emulator MCU is powered by the target system.
- The voltage of the target system should be within the range of the MCU specification and suit to the emulator MCUs as shown below;
 - (1) For 5.0V version MCUs: +4.5 to +5.5 V
 - (2) For 3.3V version MCUs: +3.0 to +3.6 V
- Do not change the voltage of the target system after turning on the power.

IMPORTANT

Notes on EMEM Dialog:

- When setting the EMEM dialog box of the emulator debugger M3T-PD79, pay attention to the following:

(1) Processor Mode

Specify a processor mode for the target MCU to be debugged. If the BYTE pin and MD0 pin settings do not match the specified processor mode, M3T-PD79 outputs an error message. In such a case, check the pin settings on the target system.

(2) Emem Address

Allocate the 1MB emulation memory that is included in the emulation pod. However, when debugging in single-chip or memory expansion mode, emulation memory is automatically allocated as a work area for spaces corresponding to flash ROM. Therefore, the usable emulation memory size varies with the internal flash ROM capacity of the selected MCU.

Example: For MCUs with 512KB flash ROM

=> Emulation memory size = 768 KB (256 KB is used as work area)

* 256 KB of emulation memory in banks 0 to 3 cannot be allocated.

(3) ROM Address

Disable the allocated emulation memory against writes by the user program. RAMs that have been mapped to external locations cannot be disabled against writes.

(4) DMA Address

In this dialog box, set a transfer area when using the MCU's DMA function, and executing 1-bus transfer between emulation memory and the target system.

(5) 8-bit bus mode Address

When accessing external data buses in 8-bit width using the chip select wait controller when BYTE pin = Low, set this address for the relevant area.

(6) Map Address

Set external or internal for the allocated emulation memory area.

EXTERNAL: Devices on the target system can be accessed.

INTERNAL: Emulation memory can be accessed.

MEMO

Chapter 2. Preparation

This chapter describes the package components, the system configuration and the preparation for using this product for the first time.

2.1 Terminology	14
2.2 Package Components.....	15
2.3 Other Tool Products Required for Development.....	15
2.4 Name of Each Part	16
(1) System Configuration	16
(2) Inside of the Emulation Pod.....	17
2.5 When Using the Emulator for the First Time	18

Chapter 2. Preparation

2.1 Terminology

Some specific words used in this user's manual are defined as follows:

PC4701 system

This means an emulator system built around the PC4701 emulator. The PC4701 emulator system is configured with an emulator PC4701, emulation pod M37900T2-RPD-E, pod probe M379xxTx-PRB, host machine and emulator debugger M3T-PD79.

Emulator main unit (Hereafter PC4701)

This means a generic name for PC4701 emulators for 8 and 16-bit MCUs. For details on specific models of the PC4701, visit the Renesas Tool Homepage at <http://www.renesas.com/en/tools>

Emulation pod M37900T2-RPD-E

This means M37900T2-RPD-E (this product) for 7900 Series MCUs. It is used with the emulator main unit PC4701.

Pod probe M379xxTx-PRB

This means the MCU-dependent part which matches to the MCU group of the 7900 Series. The pod probe is connected to the emulation pod M37900T2-RPD-E and emulates the target MCU.

Emulator debugger M3T-PD79

This means a software tool M3T-PD79 to control the emulator from the host machine through an interface.

Firmware

Program that analyzes contents of communication with the emulator debugger and controls the emulator hardware. This program is installed in the EEPROM. This program is downloadable from the emulator debugger to upgrade the firmware or to support other MCUs.

Host machine

This means a personal computer used to control the PC4701 system.

Target MCU

This means the microcomputer you are going to debug.

Target system

This means a user's application system using the microcomputer to be debugged.

User program

This means an application program to be debugged.

Emulator MCU

This means the special package MCU for the emulator mounted on the pod probe M379xxTx-PRB.

Target system

This means a user's application system using the microcomputer to be debugged.

*

In this user's manual, this symbol is used to show active LOW. (e.g. RESET*: Reset signal)

2.2 Package Components

The M37900T2-RPD-E package consists of the following items. When unpacking, check to see if your M37900T2-RPD-E contains all of these items.

Package components

Item	Quantity
M37900T2-RPD-E emulation pod main unit	1
FLX120-RPD flexible cable for connecting PC4701	1
OSC-3 oscillator circuit board (20 MHz)	1
OSC-3 oscillator circuit board (26 MHz)	1
OSC-2 oscillator circuit board (bare-board)	1
Hardware tool user registration FAX sheet (English/Japanese)	1
M37900T2-RPD-E user's manual (this manual)	1
M37900T2-RPD-E user's manual (Japanese)	1

Please keep this product's packing box and cushion material in your place for reuse at a later time when sending your product for repair or other purposes. Always use these packing box and cushion material when transporting this product.

If any of these items are missing or found faulty, please contact your local distributor. Also, if there is any question or doubt about the packaged product, contact your local distributor.

2.3 Other Tool Products Required for Development

To bring forward programs development on the 7900 Series MCUs, the products listed below are necessary in addition to those contained package above. Get them separately.

Emulator main unit	PC4701
Emulator debugger	M3T-PD79 (V.2.10 or greater is recommended)
Pod probe	M379xxTx-PRB (xx: varies with MCU) (Pod probe which matches to the MCU group is necessary)
Converter board	The converter board which matches to the foot pattern of the target system is necessary.

To purchase these products, contact your nearest distributor.

2.4 Name of Each Part

(1) System Configuration

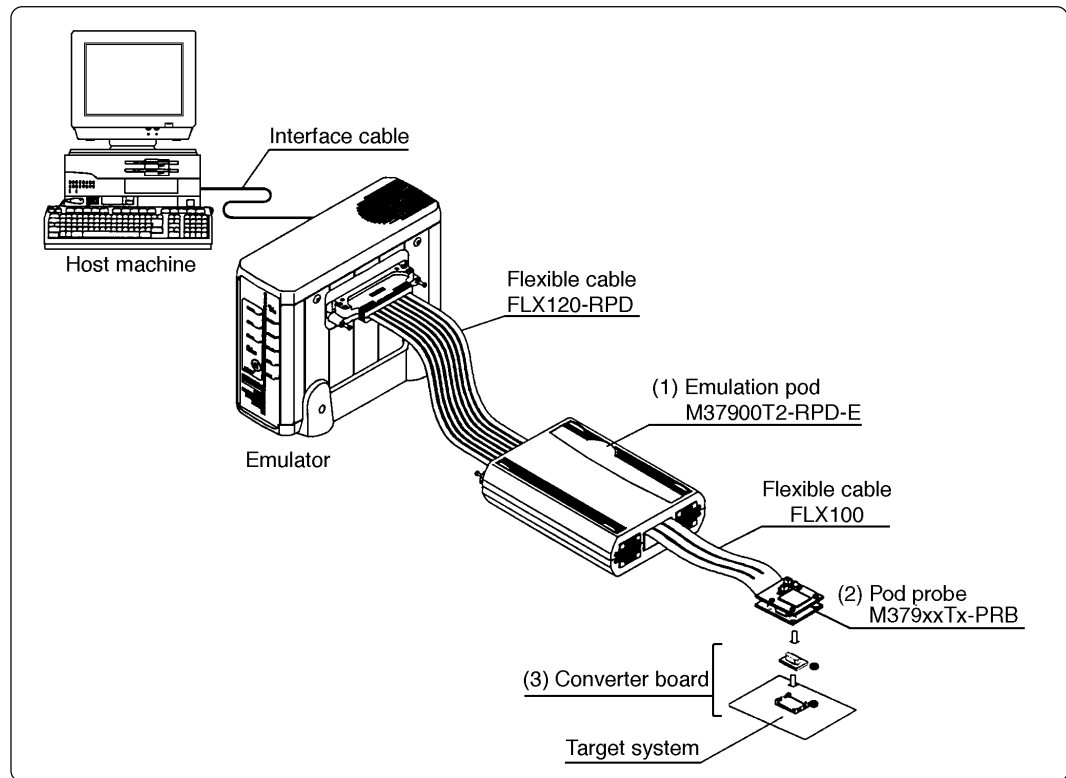


Figure 2.1 System configuration

(1) Emulation pod (M37900T2-RPD-E)

This is an emulation pod for 7900 Series MCUs. By replacing the pod probe on the tip of this product, it matches to the MCU-dependent part of 7900 Series MCUs.

(2) Pod probe (M379xxTx-PRB)

This is an MCU-dependent part which matches to the 7900 Series MCU group (option).

(3) Converter board

This is a connector board which matches to the MCU package (option).

(2) Inside of the Emulation Pod

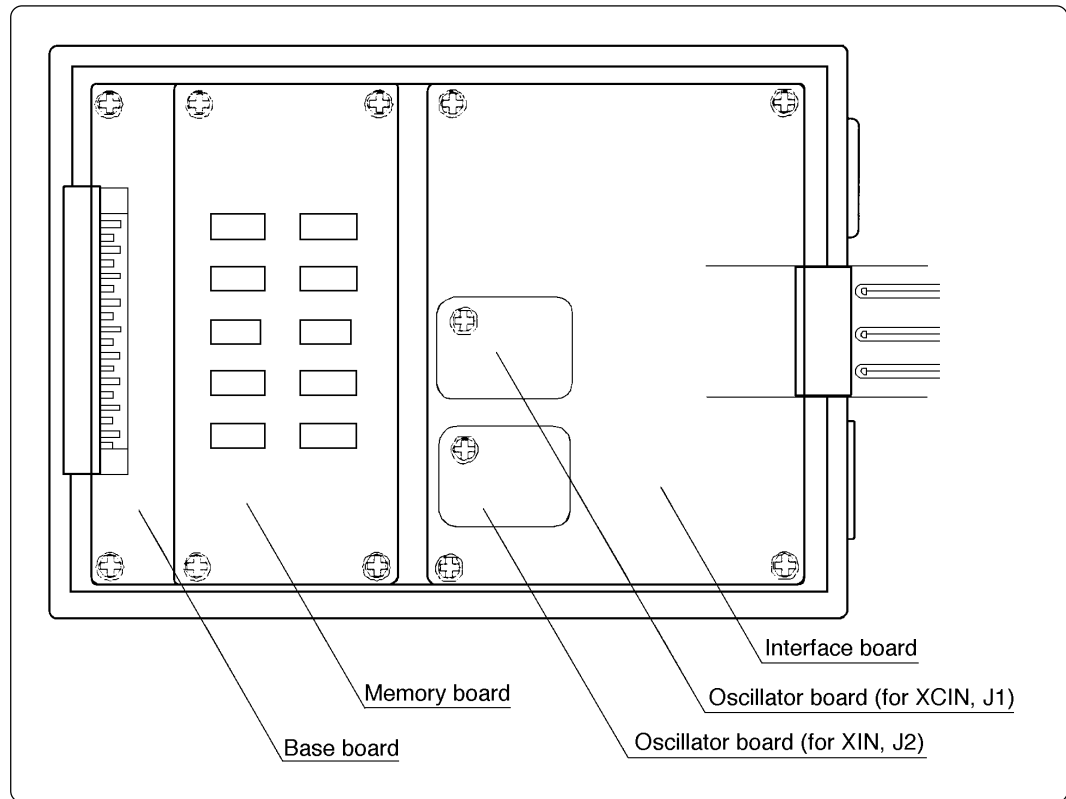


Figure 2.2 Internal view of the emulation pod

(1) Base board

Base board which controls the interface with the PC4701 and the emulator MCU.

(2) Memory board

Board on which the 1 MB + 256 KB emulation memory is mounted.

(3) Oscillator circuit board (Xin = 20 MHz and Xcin = 32 kHz when shipped from factory)

Board on which the internal oscillator circuit of the emulation pod is mounted. Operating frequency can be changed by replacing this board with other available oscillator circuit boards.

(4) Interface board

Board which is connected to the pod probe.

2.5 When Using the Emulator for the First Time

If you have purchased this emulation pod newly, it is necessary to download the firmware. The download procedure is given in Figure 2.3.

Before attempting to download the firmware, check the emulator debugger is installed and the pod probe, the PC4701 and the host machine are connected. For more information, see each user's manual of the emulator debugger and the PC4701.

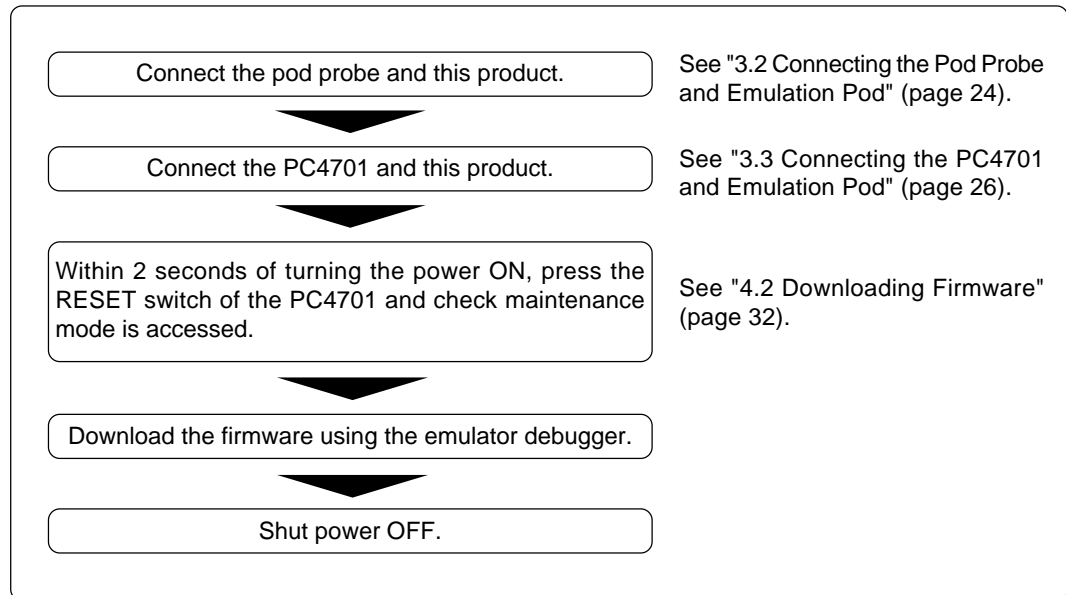


Figure 2.3 Firmware download procedure when emulator is used for the first time

To make sure the emulation pod works properly, run the self-check. For self-check procedures, see "4.4 Self-check" (page 34).

Chapter 3. Setting Up

This chapter describes switch settings required for using this product and how to connect this product to the PC4701 and the pod probe.

3.1	Selecting Clock Supply	20
(1)	Using the Oscillator Circuit on the Target System	21
(2)	Changing the Internal Oscillator Circuit of the Emulation Pod	22
(3)	Replacing the Oscillator Circuit Board	23
3.2	Connecting the Pod Probe and Emulation Pod	24
3.3	Connecting the PC4701 and Emulation Pod	26
(1)	Connecting the Cable to the PC4701	26
(2)	Connecting the Cable to the Emulation Pod	27

Chapter 3. Setting Up

To use this emulation pod with your application system, it is necessary to set as follows. Set the following after removing the upper cover.

3.1 Selecting Clock Supply

There are two ways to supply a clock to the MCU, using the oscillator circuit of the emulation pod or using the oscillator circuit on the target system. Table 3.1 lists the factory-settings of each clock supply.

Table 3.1 Clock supply to the MCU

Clock	Description	Display of emulator debugger	Factory-setting
X _{IN} (J2 side)	Internal oscillator circuit of emulation pod (OSC-3: 20 MHz)	Internal	Yes
	Target system	External	-
X _{CIN} (J1 side)	Internal oscillator circuit of emulation pod (OSC-3: 32 kHz)	Internal	Yes
	Target system	External	-

IMPORTANT

Note on Changing the Clock Supply:

- The clock supply can be set by the Init dialog box when starting up the emulator debugger or inputting CLK command on the script window.

(1) Using the Oscillator Circuit on the Target System

When turning on the power supply, the internal clock of the emulation pod is selected to supply the clock to the MCU. To use the external clock on the target system, change the clock by the Init dialog box or CLK command on the emulator debugger (for details, refer to the user's manual of the emulator debugger).

IMPORTANT

Notes on External Clock:

- To operate the emulation pod with an external clock, construct the oscillator circuit as shown in Figure 3.1 in the target system and input the oscillator output at 50% duty (within the operating range of the evaluation MCU) into the X_{IN} pin. And the X_{OUT} pin should be open.
- Make note of the fact that in the oscillator circuit shown in Figure 3.2 where a resonator is connected between the X_{IN} and X_{OUT} pins, oscillation does not occur because a flexible cable, buffer IC and other devices are used between the evaluation MCU and the target system.

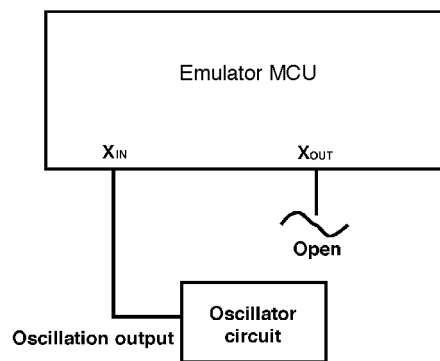


Figure 3.1 External oscillator circuit

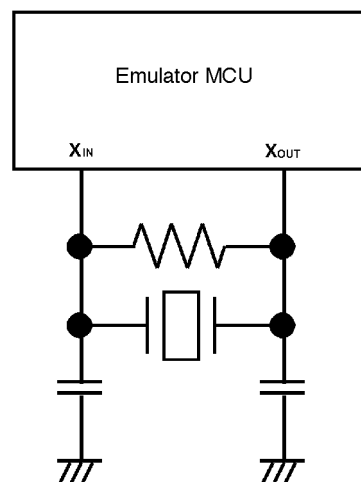


Figure 3.2 Circuit in which oscillation does not occur

(2) Changing the Internal Oscillator Circuit of the Emulation Pod

An oscillator circuit board for 20 MHz is mounted on this product and an oscillator circuit board for 26 MHz is included. To use the emulation pod at a frequency other than 20 MHz and 26 MHz, build the desired oscillator circuit on the included OSC-2 oscillator circuit board (bare board) and replace the board installed in the emulation pod when shipped from the factory.

Figure 3.3 shows a view of the OSC-2 oscillator circuit board (bare board) and where connector pins are located. Figure 3.4 shows the circuitry of the OSC-2 oscillator circuit board (bare board). Use the number of oscillator circuits recommended by the oscillator manufacturer.

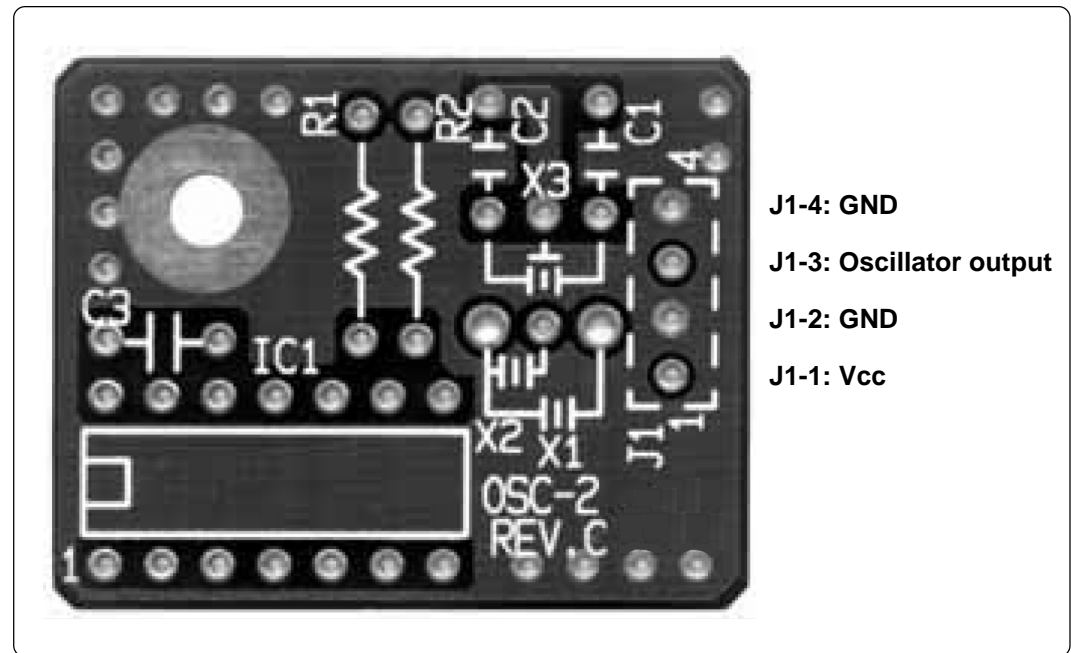


Figure 3.3 External view of the oscillator board (OSC-2) and connector pin assignment

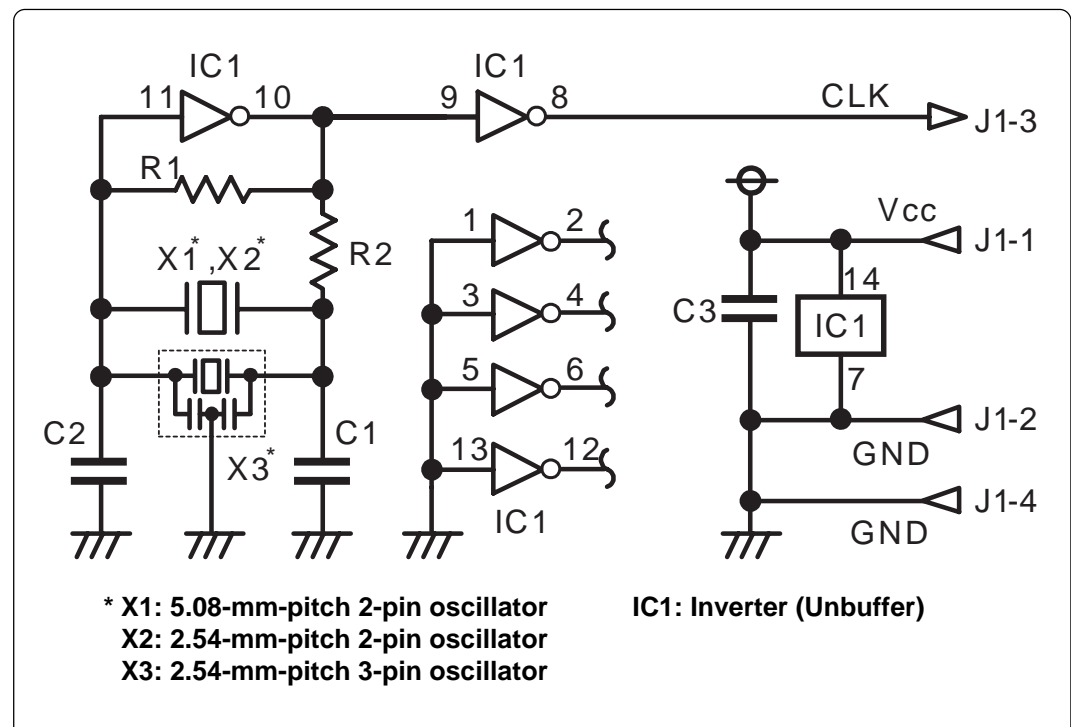


Figure 3.4 Circuit of the oscillator board (OSC-2)

(3) Replacing the Oscillator Circuit Boards

Figures 3.5 and 3.6 show how to replace the oscillator circuit board. For the location of the oscillator circuit board, see Figure 2.2.

- (1) Remove the four screws of both sides of this product and lift off the upper cover. (see Figure 3.5)
- (2) Unscrew the screw connecting the oscillator board.
- (3) Lift off the oscillator board.
- (4) Insert the connector J1 of the oscillator board to the connector J1 (or J2) of the interface board M37900T-PRT.
- (5) Fix the oscillator circuit board to the M37900T-PRT board with the screw.
- (6) Replace the upper cover and secure the four screws.

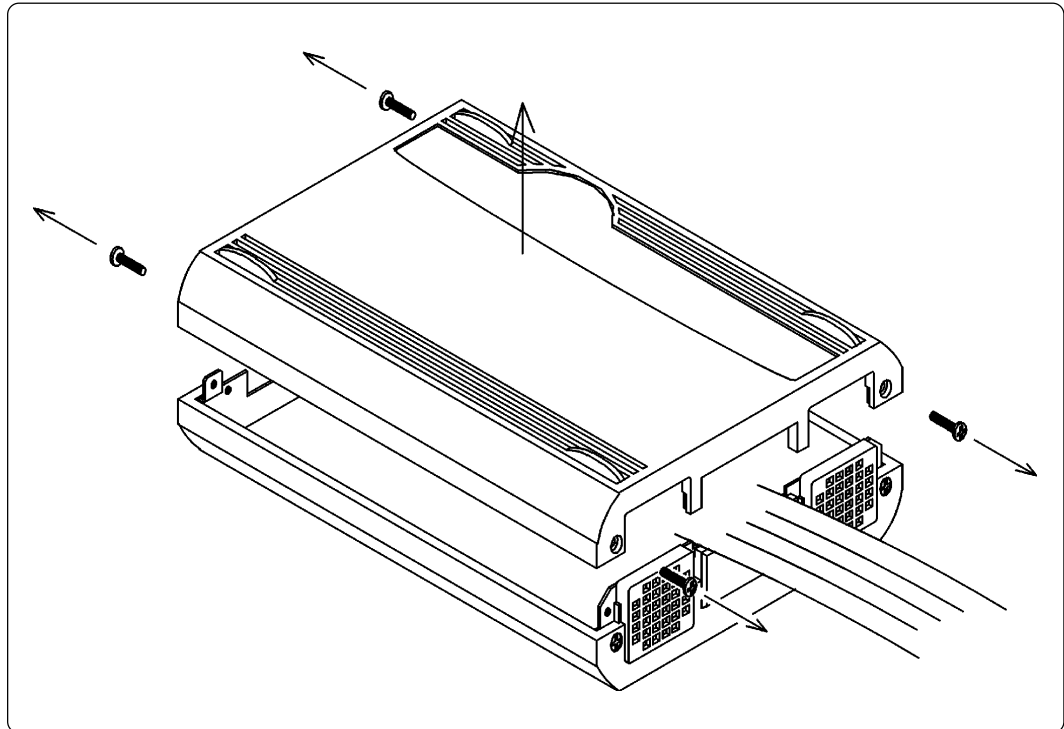


Figure 3.5 Removing the upper cover

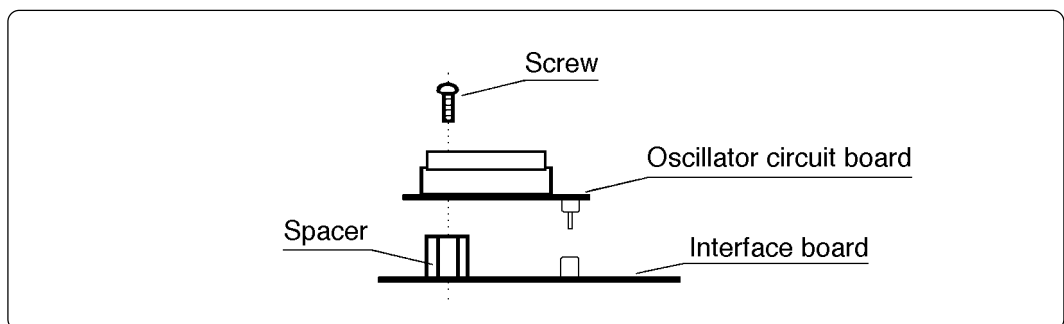


Figure 3.6 Replacing oscillator boards

CAUTION

When Removing the Upper Cover:

- Always shut OFF power when removing the upper cover or replacing oscillator boards.

3.2 Connecting the Pod Probe and Emulation Pod

The 7900 Series emulation pod consists of the following 2 products. How to connect them is shown in Figure 3.7.

- (1) Emulation pod: M37900T2-RPD-E
- (2) Pod probe: M379xxTx-PRB (designed for each MCU group)

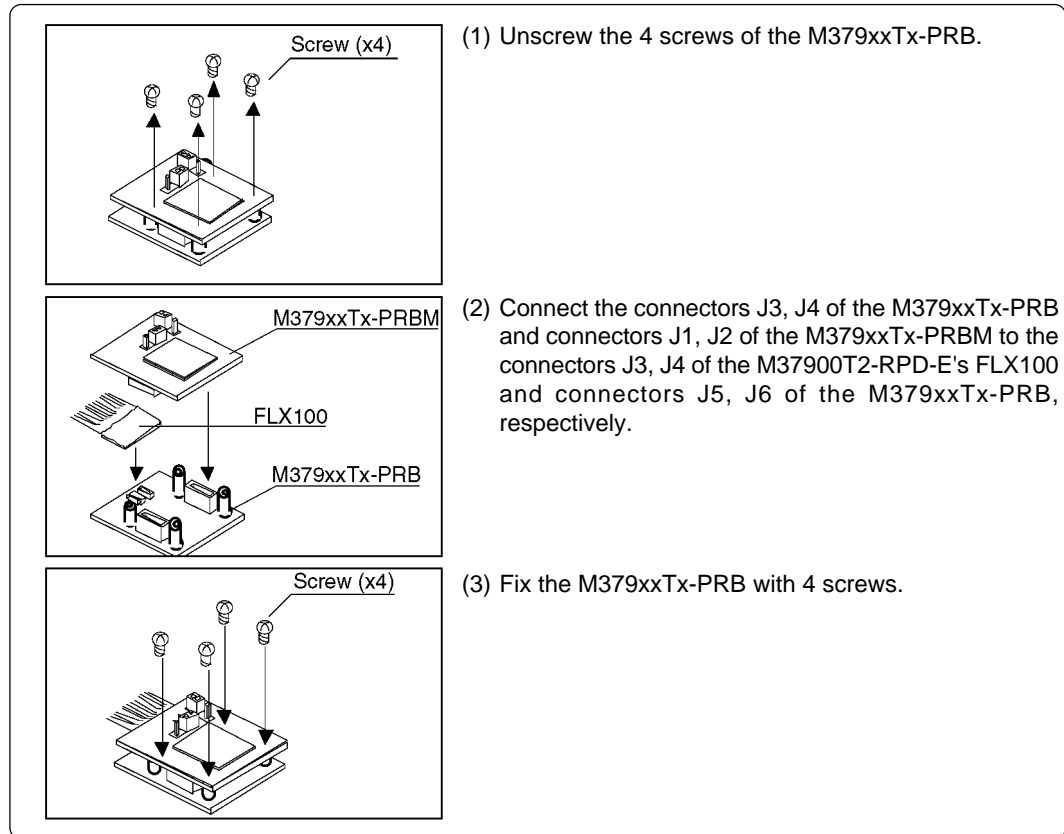


Figure 3.7 Connecting pod probe

With the 7900 Series emulator system, the internal flash ROM of the emulator MCU is used as an emulation memory.

As write/erase iterations to the internal ROM are limited, it is necessary to replace the MCU board (M379xxTx-PRBM) depending on its life span.

How to replace the MCU board is shown in Figure 3.8.

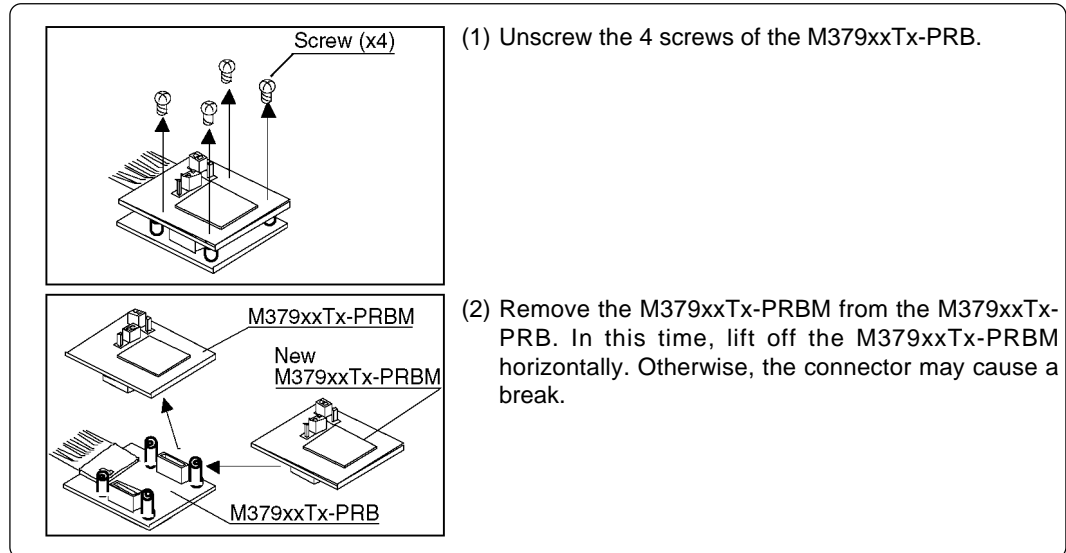


Figure 3.8 Removing MCU board M379xxTx-PRBM

CAUTION

When Connecting Pod Probe:

- Always shut OFF power when connecting the pod probe. The power ON state could destroy internal circuits.
- The insertion/removal iterations of the connector of the pod probe are limited. Check your pod probe's user's manual.
- For some types of the pod probe, the method of connection is different. Check your pod probe's user's manual.

3.3 Connecting the PC4701 and Emulation Pod

To connect the emulation pod to the PC4701, use the FLX120-RPD 120-pin flexible cable included with this product package. Connect the PC4701 side connector of the FLX120-RPD to the cable connector of the PC4701, then secure with the screws.

(1) Connecting the Cable to the PC4701

Figure 3.9 shows how to connect the PC4701 and FLX120-RPD.

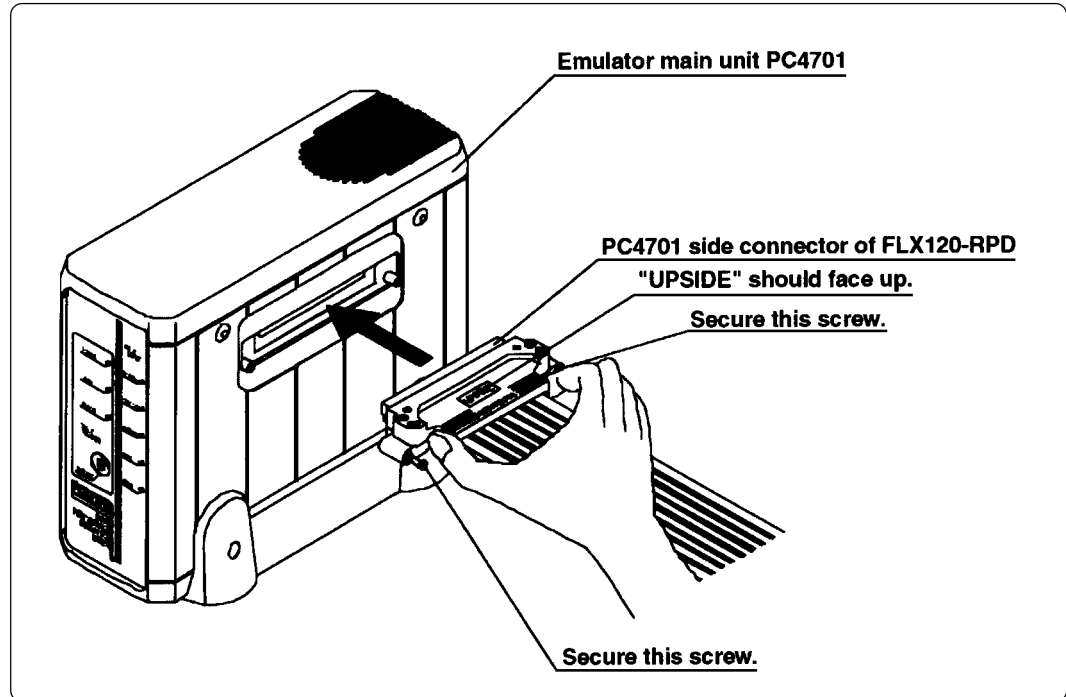


Figure 3.9 Connecting PC4701 and FLX120-RPD

CAUTION

Note on Connecting the Cable:

- Always shut OFF power before connecting the cable. The power ON state could destroy internal circuits.

Note on Securing the Screws:

- After connecting the cable to the emulator main unit, be sure to secure the screws.

(2) Connecting the Cable to the Emulation Pod

Figure 3.10 shows how to connect the FLX120-RPD and the emulation pod.

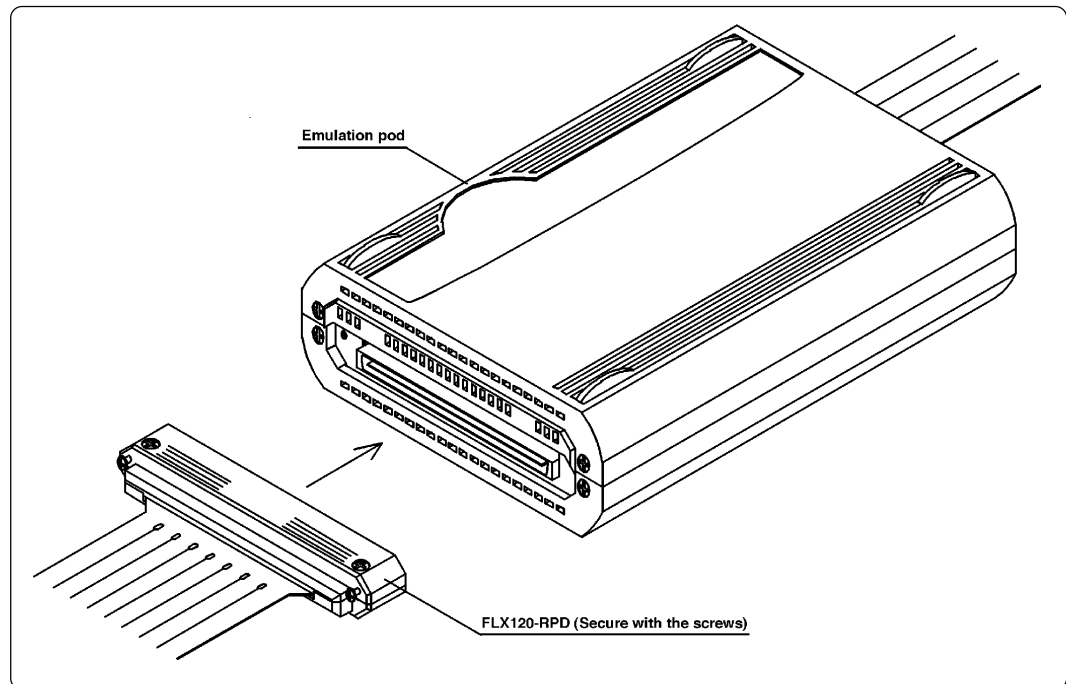


Figure 3.10 Connecting FLX120-RPD and emulation pod

CAUTION

Note on Connecting the Cable:

- Always shut OFF power before connecting the cable. The power ON state could destroy internal circuits.

Note on Securing the Screws:

- After connecting the cable to the emulator main unit, be sure to secure the screws.

MEMO

Chapter 4. Usage

This chapter describes from turning on the power of this product to starting up the emulator debugger.

4.1	Turning on Power	30
(1)	Checking the Connection of the System	30
(2)	Turning on Power	30
(3)	LED Display When PC4701 Starts Up Normally	31
4.2	Downloading Firmware	32
(1)	When It is Necessary to Download Firmware	32
(2)	Downloading Firmware in Maintenance Mode	32
4.3	Starting up the Emulator Debugger (Setting EMEM Dialog)	33
(1)	Processor Mode	33
(2)	Emem Address	33
(3)	ROM Address	33
(4)	DMA Address	33
(5)	8-bit bus mode Address	33
(6)	Map Address	33
4.4	Self-check	34
(1)	Self-check Procedure	34
(2)	If an Error is Detected in the Self-check	35

Chapter 4. Usage

4.1 Turning on Power

(1) Checking the Connection of the System

Before turning the power ON, check the connection of the PC4701, emulation pod, pod probe, converter board and target system.

(2) Turning on Power

Power ON/OFF the target system and the PC4701 as simultaneously as possible.

CAUTION

Notes on Power Supply:

- The emulator's V_{CC} pin is connected to the target system in order to monitor target system voltage. For this reason, the emulator cannot supply power to the target system. Therefore, provide the target system with a separate power supply from that of the emulator.
- Keep target system power supply voltage within the MCU's specified range and suit to the emulator MCUs as shown below;
 - (1) For 5.0V version MCUs: +4.5 to +5.5 V
 - (2) For 3.3V version MCUs: +3.0 to +3.6 V
- Do not change target system power supply voltage after power has been activated.

(3) LED Display When PC4701 Starts up Normally

After the emulator starts up, check the status of the LEDs on the front panel to see whether emulation pod operation is enabled or not. Figure 4.1 shows front panel LED lighting status when the emulator is turned ON.

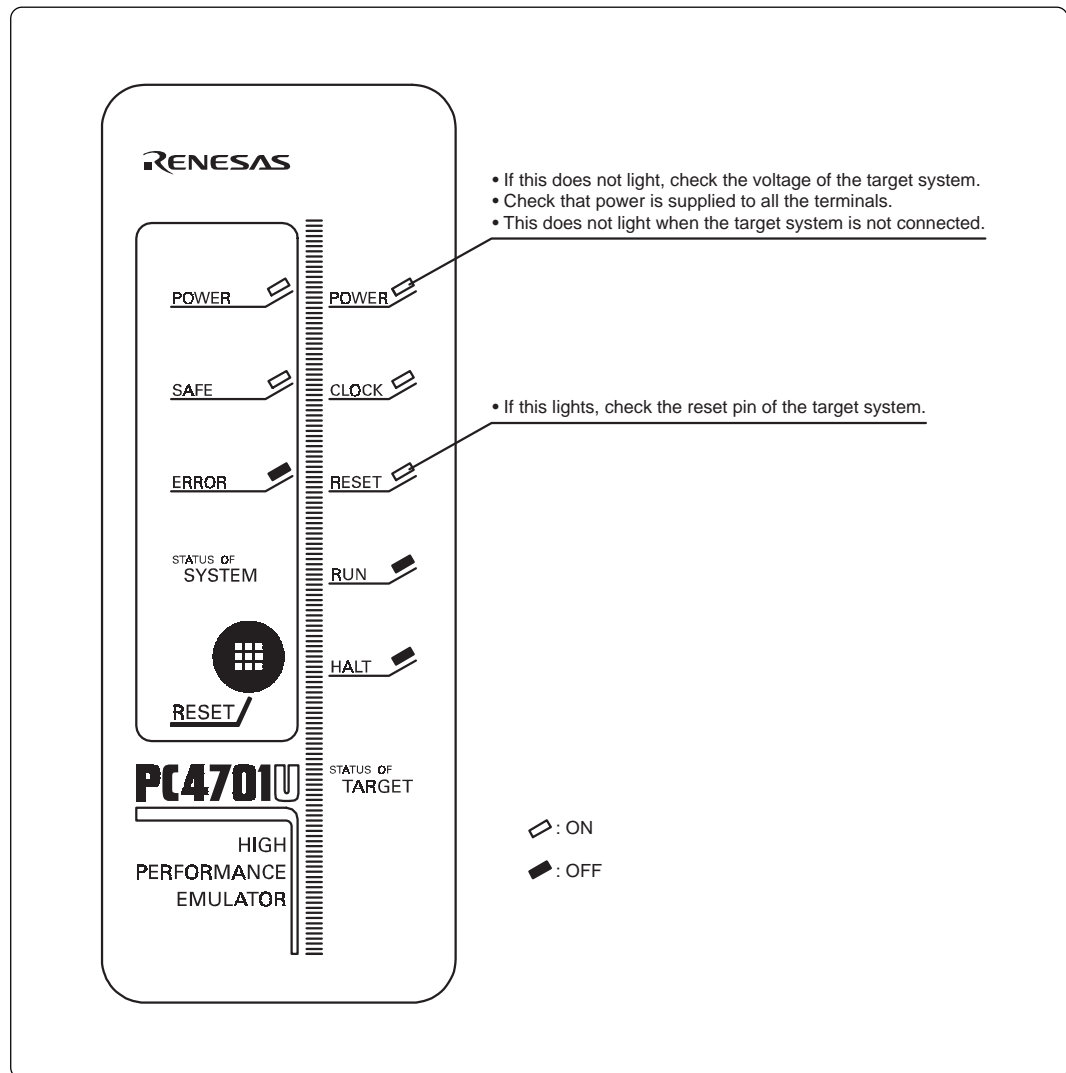


Figure 4.1 LED display when the power turned on

IMPORTANT

Note on Memory Expansion Mode and Microprocessor Mode:

- To use memory expansion or microprocessor mode, be sure to set the RDY and HOLD pins so that they are not active at startup. Otherwise the emulator system will not start up correctly.

4.2 Downloading Firmware

(1) When It is Necessary to Download Firmware

It is necessary to download firmware when:

- (1) you use this product for the first time.
- (2) the firmware has been upgraded.
- (3) the emulator debugger has been upgraded.
- (4) you use this product with the PC4701 which was used with other emulation pod before.

(2) Downloading Firmware in Maintenance Mode

Download the firmware in maintenance mode as explained here following. The target system must not be connected when downloading the firmware.

- (1) Within 2 seconds of activating power to the emulator, press the RESET switch on the emulator front panel. This will switch the emulator to maintenance mode.
- (2) Start up the emulator debugger. When the Init dialog box setup is complete, the dialog which urges to download the firmware will appear. Download the firmware following messages. Required time for downloading the firmware depends on the connection of the interface.
 - For USB and LPT parallel interface About 20 seconds
 - For dedicated parallel interface About 30 seconds
 - For serial interface About 7 minutes

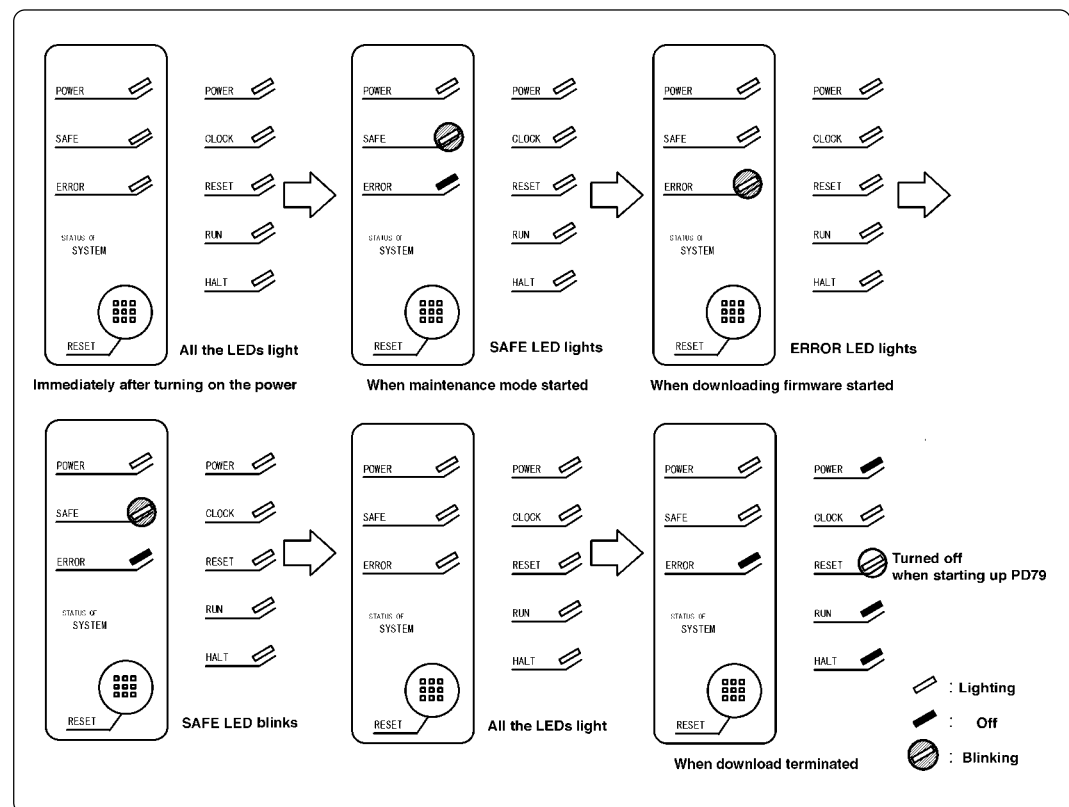


Figure 4.2 Downloading firmware in maintenance mode

IMPORTANT

Note on Downloading Firmware:

- Do not shut OFF power while the firmware is being downloaded. Doing so, the emulator will not start up properly. If power is shut OFF by mistake, redownload the firmware in maintenance mode.

4.3 Starting Up the Emulator Debugger (Setting EMEM Dialog)

The EMEM dialog box appears when you have started the emulator debugger and set up the Init dialog box or finished downloading the firmware. In this dialog box, set the processor mode for the target MCU and allocate emulation memory.

When setting the EMEM dialog box of the emulator debugger M3T-PD79, pay attention to the following:

(1) Processor Mode

Specify a processor mode for the target MCU to be debugged. If the BYTE pin and MD0 pin settings do not match the specified processor mode, M3T-PD79 outputs an error message. In such a case, check the pin settings on the target system.

(2) Emem Address

Allocate the 1MB emulation memory that is included in the emulation pod. However, when debugging in single-chip or memory expansion mode, emulation memory is automatically allocated as a work area for spaces corresponding to flash ROM. Therefore, the usable emulation memory size varies with the internal flash ROM capacity of the selected MCU.

Example: For MCUs with 512KB flash ROM

=> Emulation memory size = 768 KB (256 KB is used as work area)

* 256 KB of emulation memory in banks 0 to 3 cannot be allocated.

(3) ROM Address

Disable the allocated emulation memory against writes by the user program. RAMs that have been mapped to external locations cannot be disabled against writes.

(4) DMA Address

In this dialog box, set a transfer area when using the MCU's DMA function, and executing 1-bus transfer between emulation memory and the target system.

(5) 8-bit bus mode Address

When accessing external data buses in 8-bit width using the chip select wait controller when BYTE pin = Low, set this address for the relevant area.

(6) Map Address

Set external or internal for the allocated emulation memory area.

EXTERNAL: Devices on the target system can be accessed.

INTERNAL: Emulation memory can be accessed.

4.4 Self-check

(1) Self-check Procedure

To run the emulator self-check, do so as explained here below. While the self-check is in progress, LEDs will change as shown in Figure 4.3.

- (1) Set the switches in the pod probe same as the factory-setting (refer to the user's manual of the pod probe).
- (2) When the target system is connected, disconnect the target system.
- (3) Within 2 seconds of activating power to the emulator, press the RESET switch on the emulator front panel to switch the emulator to maintenance mode.
- (4) Check the "SAFE" LED starts blinking and then press the RESET switch again.
- (5) The self-check will start. If the normal result is displayed in about 2 minutes, the self-check has terminated normally.

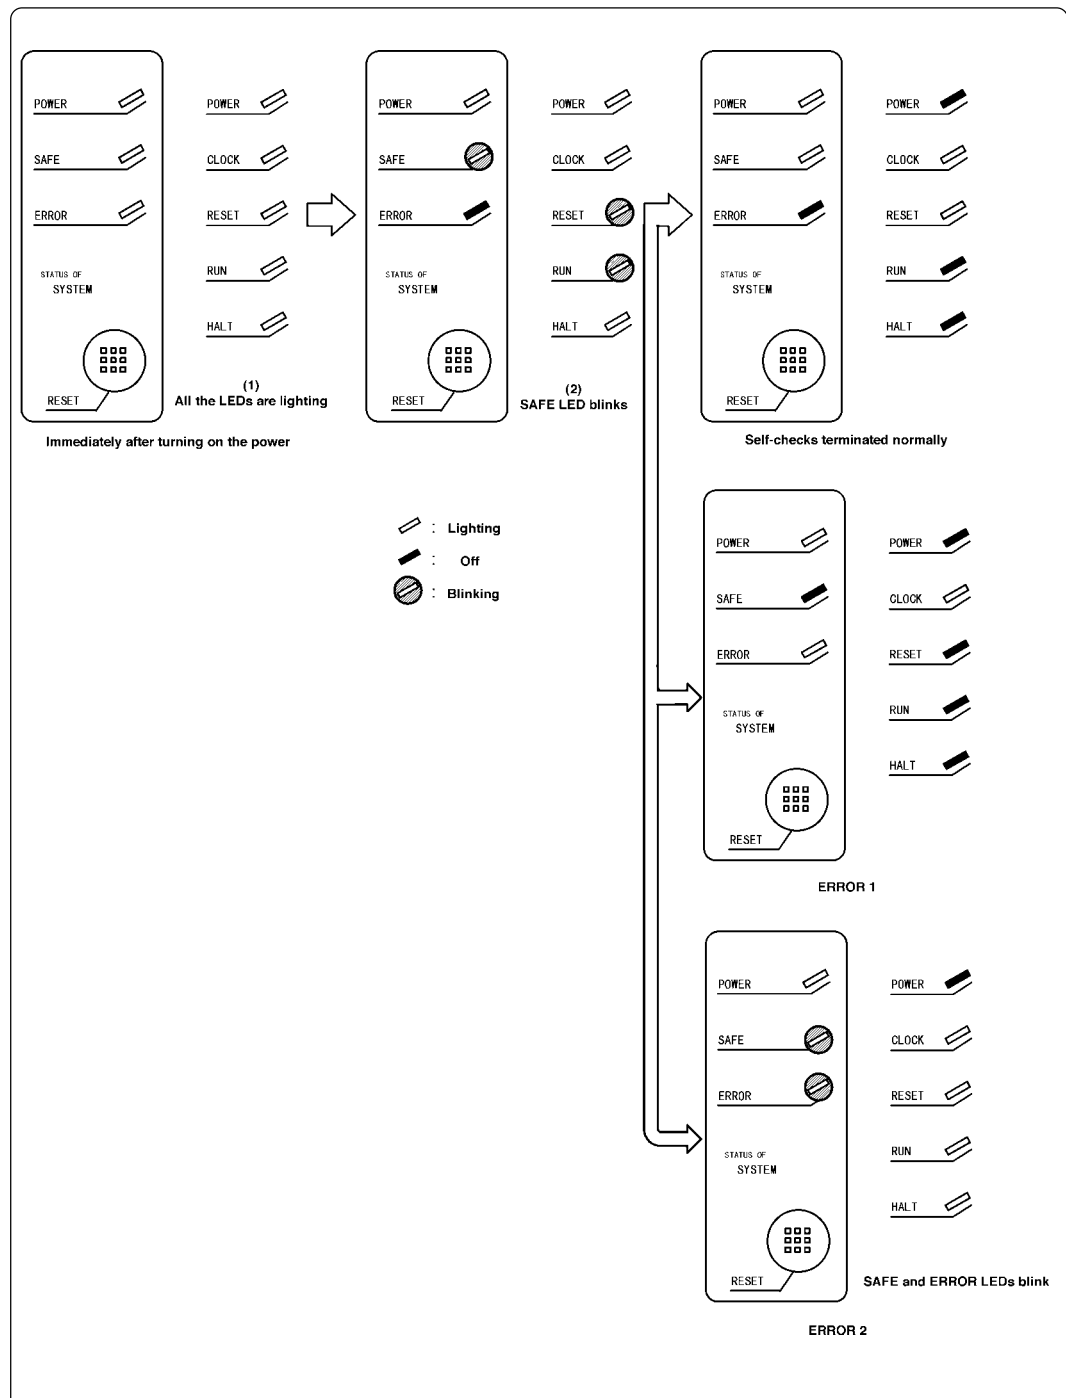


Figure 4.3 Self-check procedure

(2) If an Error is Detected in the Self-check

If the self-check does not result normally (ERROR 1 and ERROR 2 in Figure 4.3), check the following.

- Check the connection of the emulation pod and the PC4701.
- Check the connection of the emulation pod and the pod probe.
- Redownload the proper firmware.
- Check if the switches in the pod probe are set same as the factory-setting (refer to the user's manual of the pod probe).

IMPORTANT

Note on Self-check:

- If the self-check does not result normally (excluding target status errors), the emulation pod may be damaged. Contact your local distributor.

MEMO

Chapter 5. Specifications

This chapter describes specifications of this product.

5.1 Specifications	38
5.2 External Dimensions of the Emulation Pod	39

Chapter 5. Specifications

5.1 Specifications

Table 5.1 lists the specifications of the M37900T2-RPD-E.

Table 5.1 Specifications of the M37900T2-RPD-E

Emulator	PC4701
Pod probe	7900 Series pod probe (M379xxTx-PRB)
Emulation memory	Fixed 256 KB (Fixed 00 to 03 banks, attribute specifiable) Changeable 1 MB (Possible to allocate by bank, attribute specifiable)
Clock supply	Internal oscillator circuit board, switchable to external oscillator
Operating temperature	5 to 35°C (no dew)
Storage temperature	-10 to 60°C (no dew)
Power supply to emulation pod	Supplied from emulator main unit
Overseas standards	(1) U.S. EMI standards (FCC part 15 Class A) (2) CE marking (EN55022, EN50082-1)

5.2 External Dimensions of the Emulation Pod

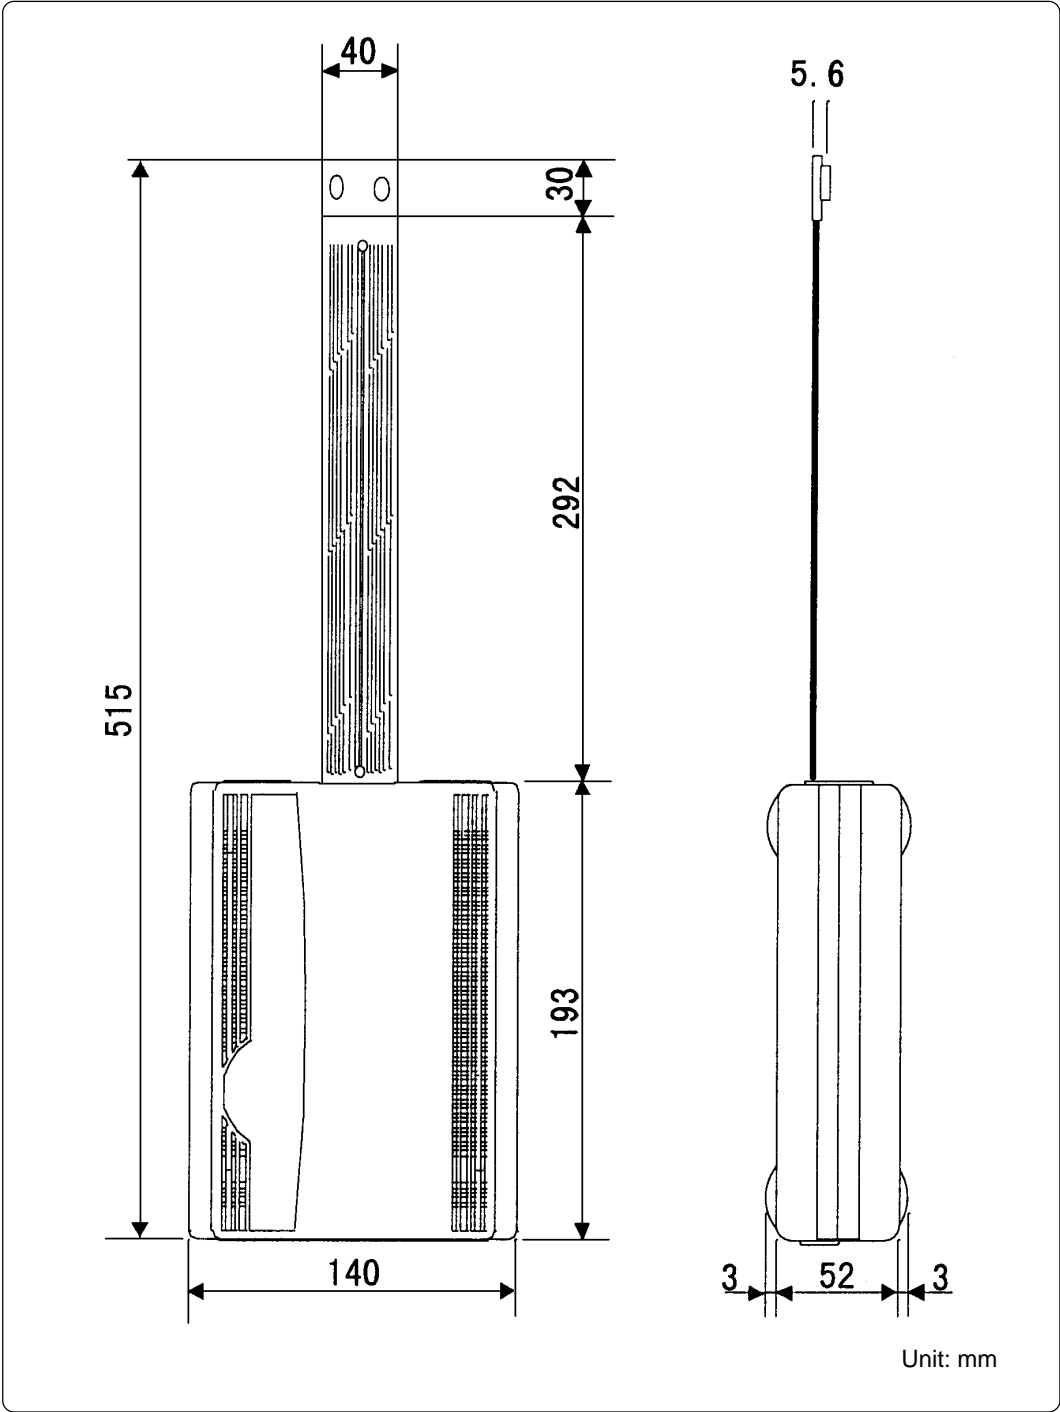


Figure 5.1 External dimensions of the emulation pod

MEMO

Chapter 6. Troubleshooting

This chapter describes how to troubleshoot when this product does not work properly.

6.1 Flowchart to Remedy the Troubles	42
6.2 When the Emulator Debugger Does Not Start Up Properly	43
(1) When the LED Display of the PC4701 is Abnormal	43
(2) Errors Occur at Debugger Startup (target connected)	44
(3) Errors Occur at Debugger Startup (target not connected)	45
6.3 Operation Differs from that of MCUs with Flash Memory	46
(1) Initializing the Internal Resources of an MCU at Power-on	46
(2) Oscillator Circuits	46

Chapter 6. Troubleshooting

6.1 Flowchart to Remedy the Troubles

Figure 6.1 shows the flowchart to remedy the troubles from when power to the emulator is activated until the emulator debugger starts up. Check this while the target system is disconnected.

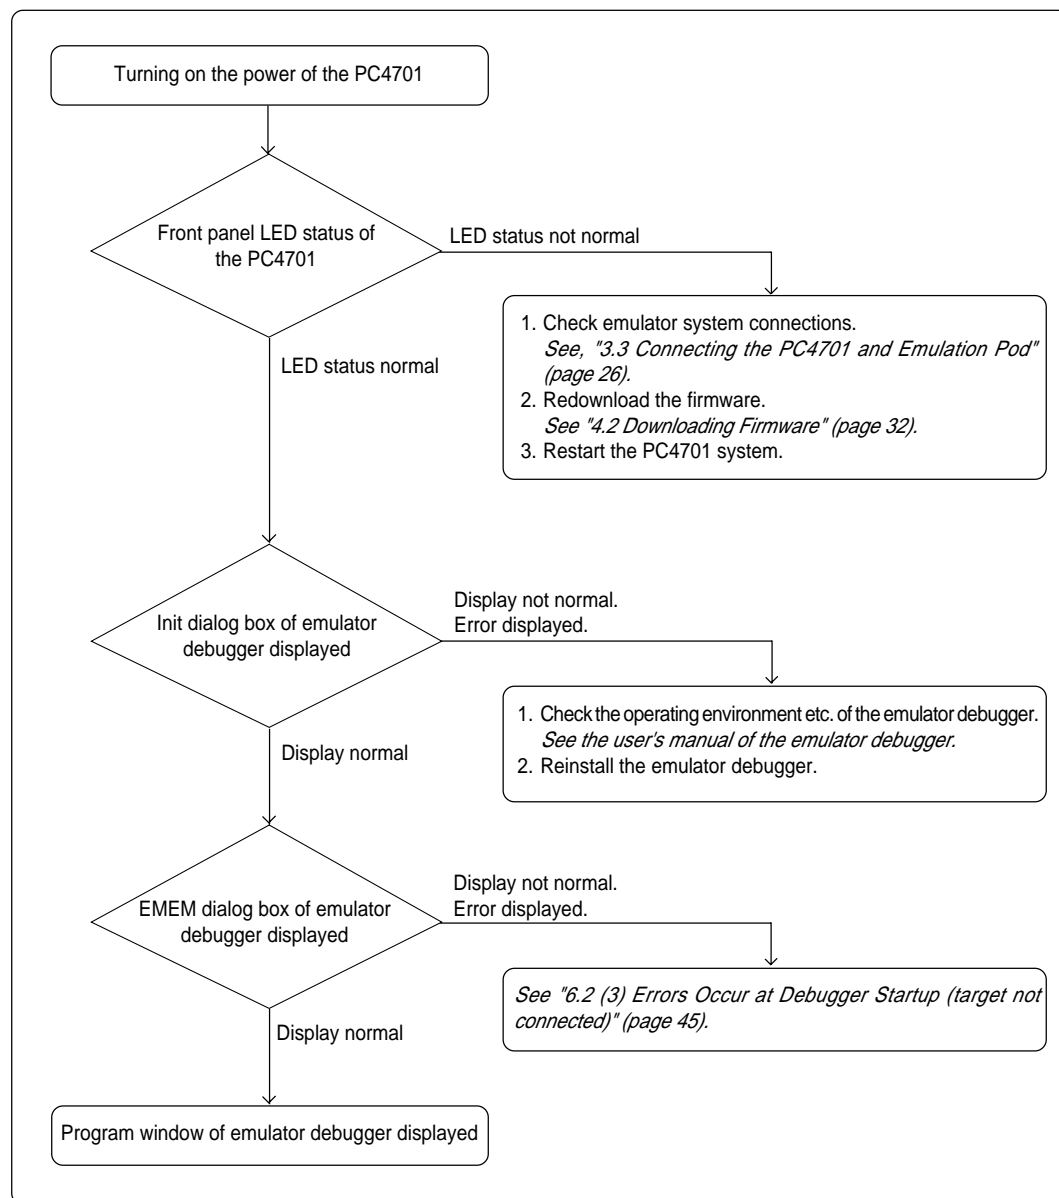


Figure 6.1 Flowchart to remedy the troubles

6.2 When the Emulator Debugger Does Not Start Up Properly

(1) When the LED Display of the PC4701 is Abnormal

Table 6.1 LED's abnormal display and its checkpoints

Error	Connection to the target system	Checkpoint
LEDs do not light up.	-	Recheck the power cable is connected to the PC4701. <i>See the user's manual of the PC4701.</i>
LED display is not normal (see Figure 4.1)	Not connected	(1) Recheck the connection between the PC4701, this product and pod probe. <i>See the user's manual of the pod probe.</i> <i>See "3.3 Connecting the PC4701 and Emulation Pod" (page 26).</i> (2) Check the proper firmware is downloaded. (3) Check the clocks of the emulator debugger are not set to "EXT". <i>See the CLK command of the emulator debugger.</i> (4) Check the oscillation circuit in the emulation pod is oscillating. <i>See "3.1 Selecting Clock Supply" (page 20).</i>
	Connected	(1) Recheck the connection between the PC4701, this product and pod probe. <i>See the user's manual of the pod probe.</i> <i>See "3.3 Connecting the PC4701 and Emulation Pod" (page 26).</i> (2) Check the proper firmware is downloaded. (3) Check power is properly supplied to the target system and that the target system is properly grounded. (4) Check the oscillation circuit in the target system is oscillating. (5) Check the switches in the pod probe are correctly set. <i>See the user's manual of the pod probe.</i>

(2) Errors Occur at Debugger Startup (target connected)

Table 6.2 Checkpoints of errors of the emulator debugger M3T-PD79 (target is connected)

Error	Checkpoint
Communication error occurred Data was not sent to the target	Check all emulator debugger settings, interface cable connection and switches on the rear of the PC4701 match. <i>See the user's manuals of the PC4701 and emulator debugger.</i>
Target system cannot be properly built	(1) Download the proper firmware. <i>See "4.2 Downloading Firmware" (page 32).</i> (2) Recheck the connection between the PC4701, this product and pod probe. <i>See the user's manual of the pod probe</i> <i>See "3.3 Connecting the PC4701 and Emulation Pod" (page 26).</i>
M3T-PD79 version is not the same version as the firmware in the target	Download the proper firmware. <i>See "4.2 Downloading Firmware" (page 32).</i>
Target MCU is in the reset state	(1) Check the reset pin of the target system is pulled up. (2) Check the reset pin of the target system has changed from "L" to "H" level.
Target MCU cannot be reset Flash ROM erase error occurred	(1) Check the NMI* pin is "H" level. (2) When in memory expansion or microprocessor mode, check the RDY* and HOLD* pins are "H" level, respectively. (3) If the reset circuit of the target system has a watchdog timer, disable the timer. (4) Check power is properly supplied to the target system and that the target system is properly grounded. (5) The program may be uncontrollable in areas memory not allocated. Recheck the map setting. <i>See "4.3 Starting up the Emulator Debugger (Setting EMEM Dialog)" (page 33).</i> (6) The contents of an MCU file varies with the version of the emulator debugger M3T-PD79. Check the current MCU file is the one included with your emulator debugger M3T-PD79. (7) The flash ROM of the MCU may be worn-out. Contact your local distributor.
Target clock is stopped	(1) Check the oscillation circuit of the target system is oscillating properly. (2) Check the switches in the pod probe are correctly set. <i>See the user's manual of the pod probe.</i>
Target MCU is not receiving power	Check power is properly supplied to the target system and that the target system is properly grounded.
Not connected to target Cannot connect to target	Recheck the connection of this product, pod probe and the target system. <i>See the user's manual of the pod probe.</i>
Target MCU is uncontrollable Reset target system	Check the program is not accessing to the unused area.

(3) Errors Occur at Debugger Startup (target not connected)

Table 6.3 Checkpoints of errors of the emulator debugger M3T-PD79 (target is not connected)

Error	Checkpoint
Communication error occurred Data was not sent to the target	Check all emulator debugger settings, interface cable connection and switches on the rear of the PC4701 match. <i>See the user's manuals of the PC4701 and emulator debugger.</i>
Target system cannot be properly built	(1) Download the proper firmware. <i>See "4.2 Downloading Firmware" (page 32).</i> (2) Recheck the connection between the PC4701, this product and pod probe. <i>See the user's manual of the pod probe.</i> <i>See "3.3 Connecting the PC4701 and Emulation Pod" (page 26).</i>
M3T-PD79 version is not the same version as the firmware in the target	Download the proper firmware. <i>See "4.2 Downloading Firmware" (page 32).</i>
Target MCU cannot be reset Flash ROM erase error occurred	(1) The program may be uncontrollable in areas memory not allocated. Recheck the map setting. <i>See "4.3 Starting up the Emulator Debugger (Setting EMEM Dialog)" (page 33).</i> (2) The contents of an MCU file varies with the version of the emulator debugger M3T-PD79. Check the current MCU file is the one included with your emulator debugger M3T-PD79. (3) The flash ROM of the MCU may be worn-out. Contact your local distributor.
Target clock is stopped	Check the switches in the pod probe are correctly set. <i>See the user's manual of the pod probe.</i>
Target MCU is uncontrollable Reset target system	(1) Check the program is not accessing to the unused area. (2) If using PLL circuit, check the switch settings of the pod probe. <i>See the user's manual of the pod probe.</i>

6.3 Operation Differs from that of MCUs with Flash Memory

(1) Initializing the Internal Resources of an MCU at Power-on

With this product, the internal resources of the MCU are initialized when starting up the emulator. Therefore, the operation differs from that of actual MCUs.

(2) Oscillator Circuits

Make note of the fact that in the oscillator circuit where a resonator is connected between the X_{IN} and X_{OUT} pins, oscillation does not occur because a flexible cable, buffer IC and other devices are used between the evaluation MCU and the target system.

Chapter 7. Maintenance and Guarantee

This chapter describes how to maintenance, repair provisions and how to request for repair.

7.1 Maintenance	48
7.2 Guarantee	48
7.3 Repair Provisions.....	48
7.4 How to Request for Repair	49

Chapter 7. Maintenance and Guarantee

7.1 Maintenance

If dust or dirt collects on any equipment of your emulation system, wipe it off with a dry soft cloth. Do not use thinner or other solvents because these chemicals can cause the equipment's surface coating to separate.

7.2 Guarantee

If your product becomes faulty within one year after its purchase while being used under good conditions by observing "Precautions for Safety" described in Chapter 1 of this user's manual, we will repair or replace your faulty product free of charge. Note, however, that if your product's fault is raised by any one of the following causes, we will repair it or replace it with new one with extra-charge:

- Misuse, abuse, or use under extraordinary conditions
- Unauthorized repair, remodeling, maintenance, and so on
- Inadequate user's system or misuse of it
- Fires, earthquakes, and other unexpected disasters

In the above cases, contact your local distributor. If your product is being leased, consult the leasing company or the owner.

7.3 Repair Provisions

(1) Repair with extra-charge

The products elapsed more than one year after purchase can be repaired with extra-charge.

(2) Replacement with extra-charge

If your product's fault falls in any of the following categories, the fault will be corrected by replacing the entire product instead of repair, or you will be advised to purchase new one, depending on the severity of the fault.

- Faulty or broken mechanical portions
- Flaw, separation, or rust in coated or plated portions
- Flaw or cracks in plastic portions
- Faults or breakage caused by improper use or unauthorized repair or modification
- Heavily damaged electric circuits due to overvoltage, overcurrent or shorting of power supply
- Cracks in the printed circuit board or burnt-down patterns
- Wide range of faults that makes replacement less expensive than repair
- Unlocatable or unidentified faults

(3) Expiration of the repair period

When a period of one year elapses after the model was dropped from production, repairing products of the model may become impossible.

(4) Transportation fees at sending your product for repair

Please send your product to us for repair at your expense.

7.4 How to Request for Repair

If your product is found faulty, follow the procedure below to send your product for repair.

Customer



Fill in the Repair Request Sheet included with this product, then send it along with this product for repair to your local distributor. Make sure that information in the Repair Request Sheet is written in as much detail as possible to facilitate repair.

Distributor



After checking the contents of fault, the distributor should please send the faulty product along with the Repair Request Sheet to Renesas Solutions Corp.

Renesas Solutions

When the faulty product is repaired, it will be returned to the customer at the earliest convenience.

CAUTION

Note on Transporting the Product:



- When sending your product for repair, use the packing box and cushion material supplied with this product when delivered to you and specify handling caution for it to be handled as precision equipment. If packing of your product is not complete, it may be damaged during transportation. When you pack your product in a bag, make sure to use conductive polyvinyl supplied with this product (usually a blue bag). When you use other bags, they may cause a trouble on your product because of static electricity.

MEMO

M37900T2-RPD-E User's Manual

Rev. 1.00
July 1, 2003
REJ10J0191-0100Z

COPYRIGHT ©2003 RENESAS TECHNOLOGY CORPORATION
AND RENESAS SOLUTIONS CORPORATION ALL RIGHTS RESERVED

M37900T2-RPD-E User's Manual



Renesas Electronics Corporation

1753, Shimonumabe, Nakahara-ku, Kawasaki-shi, Kanagawa 211-8668 Japan

REJ10J0191-0100Z